


Externals size and weight

W(mm)	D(mm)	H(mm)	Weight(kg)	Remarks
1355	277	777	42.5	Key cover closed, without black
1355	295	948	42.5	Key cover opened, with black

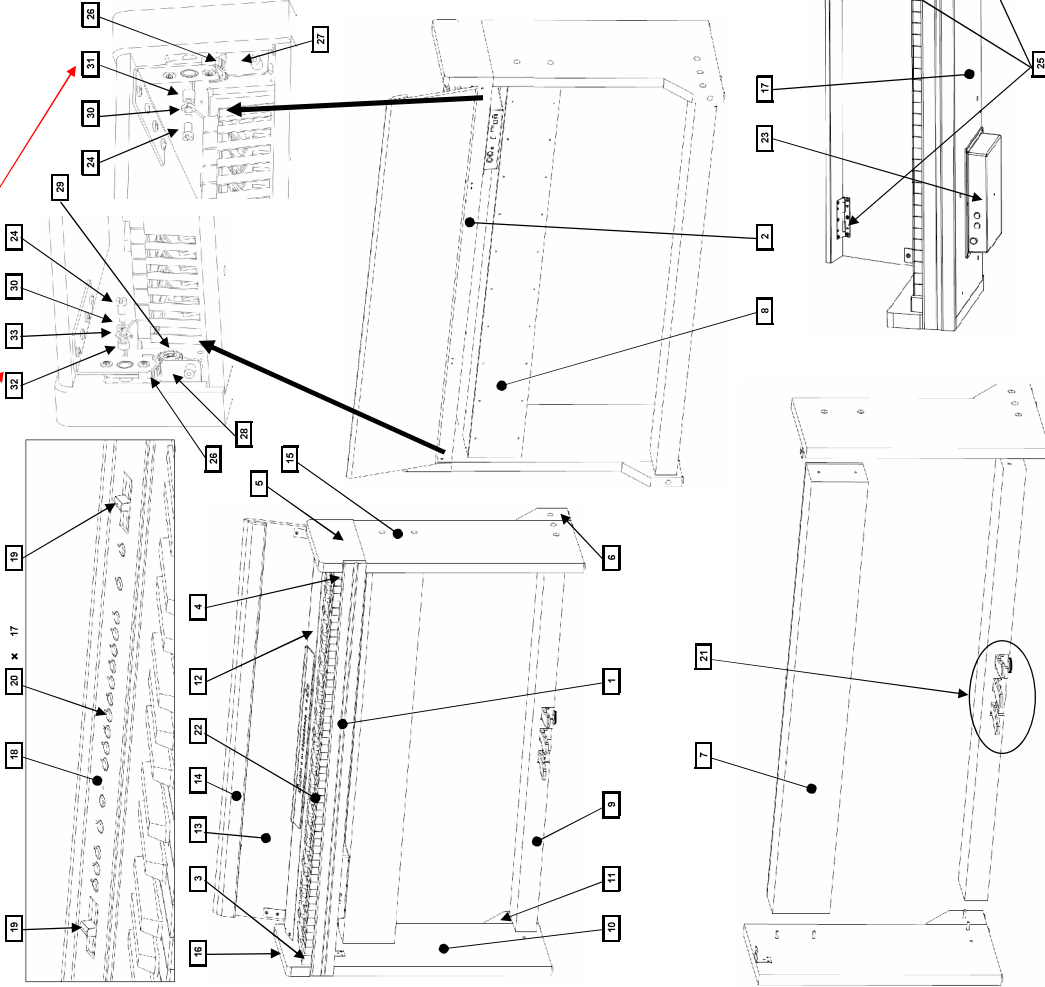

LP-350BK

No.	Level	Part Code	Part Name	QTY
1	3	59000001338	Front board LP-350	1
2	3	59000001340	Back board LP-350	1
3	3	59000001342	Left keyboard partition Board LP-350	1
4	3	59000001344	Right keyboard partition Board LP-350	1
5	3	59000001346	Right side Board LP-350	1
6	3	59000001348	Right side Rear foot Board LP-350	1
7	3	59000001350	Speaker box LP-350	1
8	3	59000001352	Shifter box LP-350	1
9	3	59000001354	Pedal box LP-350	1
10	3	59000001356	Left side foot Board LP-350	1
11	3	59000001358	Left side Rear foot Board LP-350	1
12	3	59000001360	Function board LP-350	1
13	3	59000001362	Keyboard cover Board LP-350	1
14	3	59000001364	Keyboard cover Front board LP-350	1
15	3	59000001366	Right side foot Board LP-350	1
16	3	59000001368	Bottom board LP-350	1
17	3	59000001370	Function panel LP-350 DL-1583	1
18	3	59000001270	SLIDER KNOB DL-1189	2
19	3	59000001278	SLIDER KNOB DL-1189	2
20	3	59000000324	Silicon rubber button.	17
21	2	59000001278	Pedal box part.	1
22	3	590420007300	RH48 Keyboard	1
23	3	59000001313	Main board box LP-350 DL-1541	1
24	3	not supply	Screw, PM	2
25	3	506410421646330	KEY COVER HINGE C41859-2	3
26	3	59000001328	Plastic Gear wheel LP-350 DL-1854	2
27	3	59000001328	Left buffer Stand LP-350 RD080524	1
28	3	59000001328	Right buffer Stand LP-350 RD080524	1
29	3	50645015015	DISEL-L-6X (DAMPER)	1
30	3	not supply	Metal cushion with elasticity.	2
31	3	59000001326	Plastic gear cover LP-350	1
32	3	59000001324	Δ-Mixer wheel LP-350	1
33	3	not supply	Metal cushion.	1
34	3	not supply	Metal cushion.	1
35				
36				
37				
38				
39				
40				

LP-350WH

No.	Level	Part Code	Part Name	QTY
1	3	59000001338	Front board LP-350	1
2	3	59000001341	Back board LP-350	1
3	3	59000001343	Left keyboard partition Board LP-350	1
4	3	59000001345	Right keyboard partition Board LP-350	1
5	3	59000001347	Right side Board LP-350	1
6	3	59000001349	Right side Rear foot Board LP-350	1
7	3	59000001351	Speaker box LP-350	1
8	3	59000001353	Shifter box LP-350	1
9	3	59000001355	Pedal box LP-350	1
10	3	59000001357	Left side foot Board LP-350	1
11	3	59000001359	Left side Rear foot Board LP-350	1
12	3	59000001361	Function board LP-350	1
13	3	59000001363	Keyboard cover Board LP-350	1
14	3	59000001365	Keyboard cover Front board LP-350	1
15	3	59000001367	Right side foot Board LP-350	1
16	3	59000001369	Bottom board LP-350	1
17	3	59000001268	Function panel LP-350 DL-1583	1
18	3	59000001270	SLIDER KNOB DL-1189	2
19	3	59000001278	SLIDER KNOB DL-1189	2
20	3	59000000324	Silicon rubber button.	17
21	2	59000001278	Pedal box part.	1
22	3	590420007300	RH48 Keyboard	1
23	3	59000001313	Main board box LP-350 DL-1541	1
24	3	not supply	Screw, PM	2
25	3	506410421646330	KEY COVER HINGE C41859-2	3
26	3	59000001328	Plastic Gear wheel LP-350 DL-1854	2
27	3	59000001328	Left buffer Stand LP-350 RD080524	1
28	3	59000001328	Right buffer Stand LP-350 RD080524	1
29	3	50645015015	DISEL-L-6X (DAMPER)	1
30	3	not supply	Metal cushion with elasticity.	2
31	3	59000001326	Plastic gear cover LP-350	1
32	3	59000001324	Δ-Mixer wheel LP-350	1
33	3	not supply	Metal cushion.	1
34	3	not supply	Metal cushion.	1
35				
36				
37				
38				
39				
40				