


NO	PART CODE	PART NAME	Q'TY
1	646081500	X-0370 4 LINKAGE KNOB-2 H40165-2	11
2	646081400	X-0370 4 LINKAGE KNOB-3 H40165-3	1
3	646081600	X-0370 4 LINKAGE KNOB-1 H40165-1	5
4	646081300	X-0370 4 LINKAGE KNOB-4 H40165-4	4
5	620038100	X-8110 KNOB L(2 LINKAGE) H40148-2	2
6	620038200	X-8110 KNOB L H40148-1	2
7	646081700	X-8110 KNOB L (4 LINKAGE) H40148-8	1
8	646081800	X-8110 KNOB L H40148-9	1

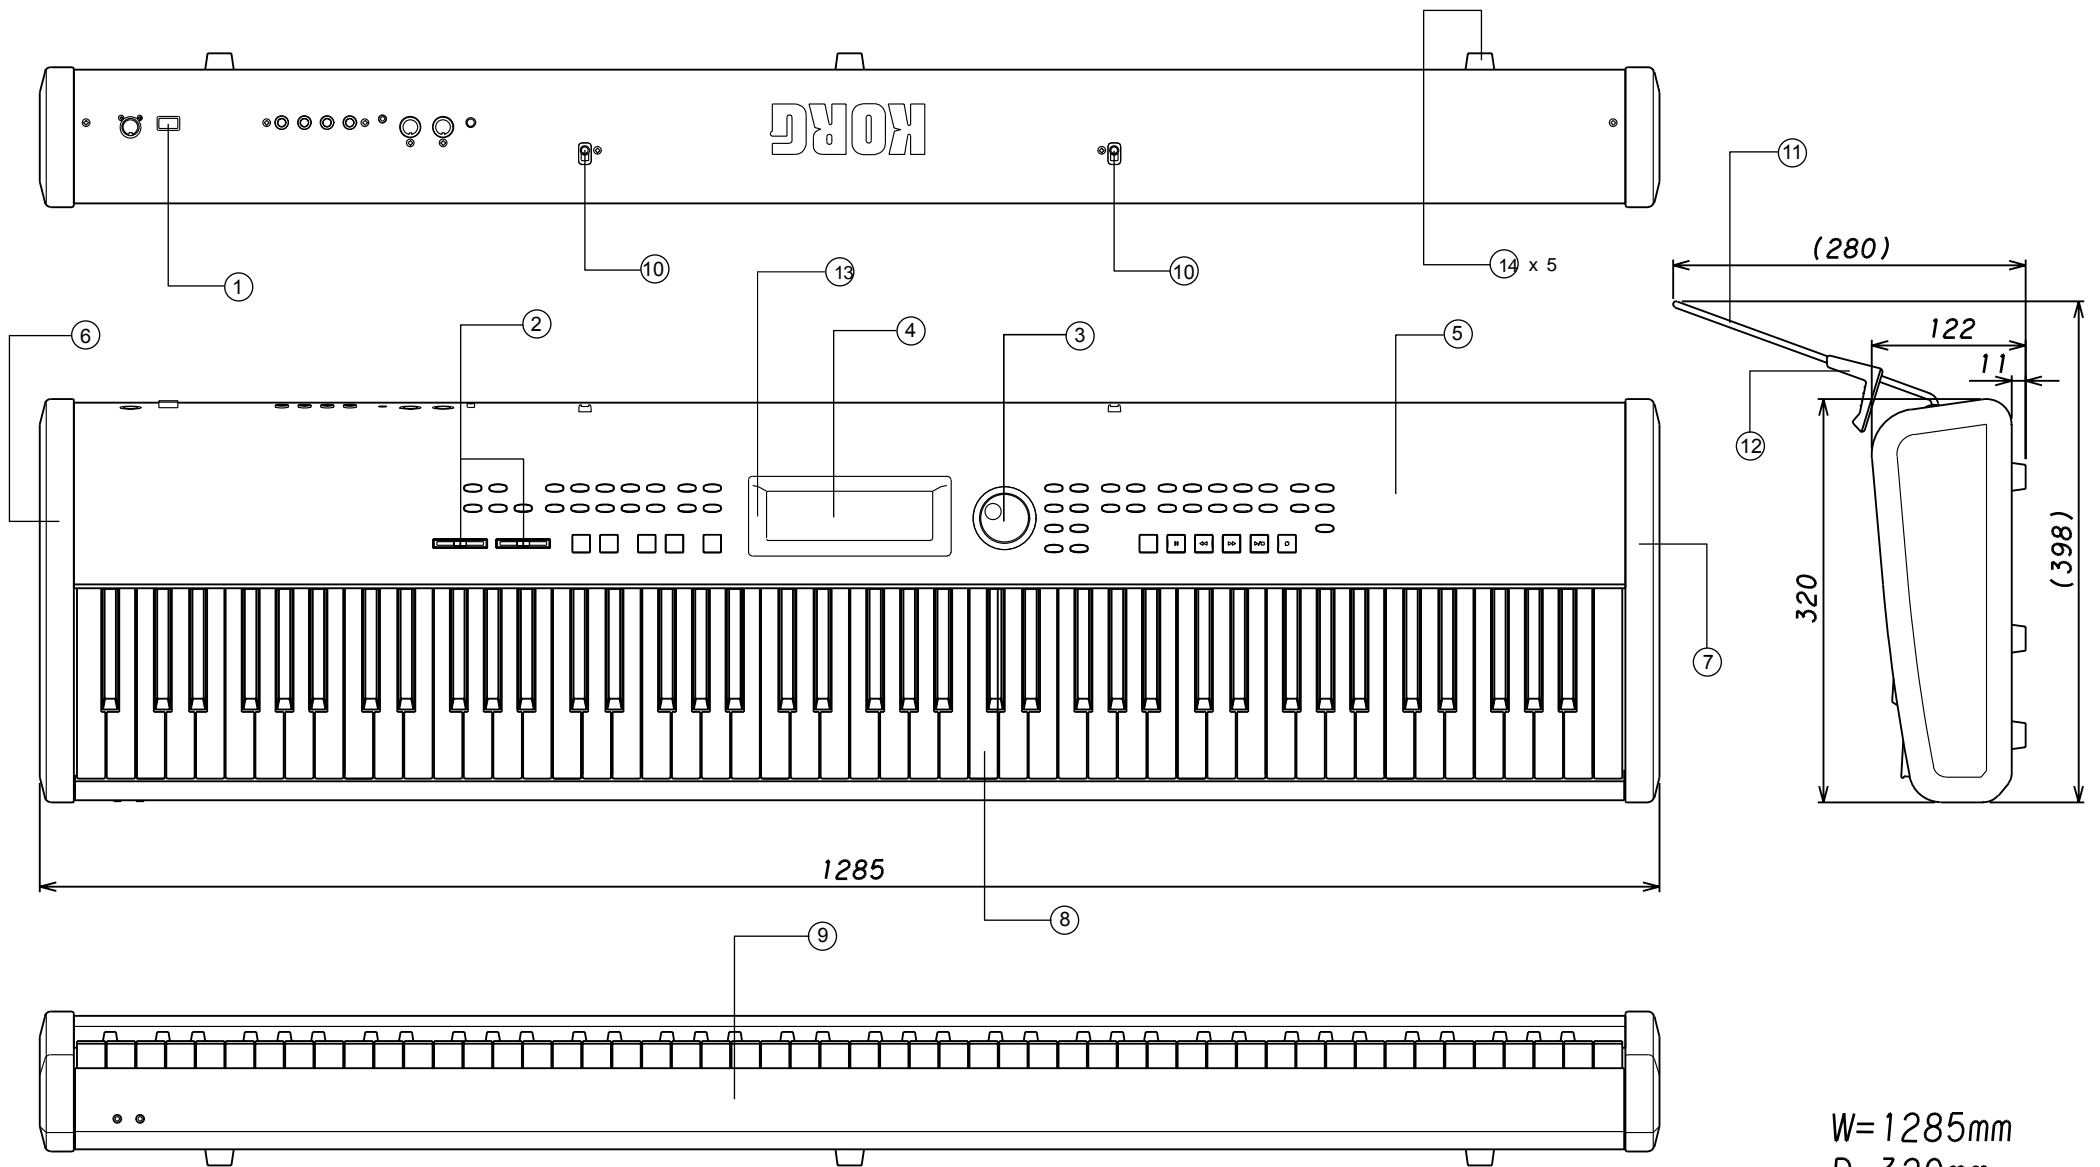

NO	PART CODE	PART NAME	QTY
1	620021600	X-825M POWER SW KNOB BK E40264	1
2	646082100	X-224 SLIDE VR KNOB NO.3 E4028	2
3	620034700	X-610 ENCODER KNOB(GRAY)E40466	1
4	313005600	LCD DG-24064-2-S1MBLA-H(AMBER)	1
5	641041655	X-0370 PANEL KOC-C10266	1
6	645053263	X-0370 SIDE BOARD L D30231-1	1
7	645053264	X-0370 SIDE BOARD R D30231-2	1
8	420006700	KEYBOARD 88NOTE TP/31+PCB	1
9	641041678	X-0370 FRONT BAR KOC-C20370	1
10	646045300	X-181 MUSIC STAND HOLDER	2
11	641041679	X-0370 MUSIC STAND 2	1
12	646082200	X-610 SCORE HOLDER NO.2	1
13	646081200	X-8330 LCD HOOD 2 KOC-E30256-2	1
14	500033200	RUBBER FOOT K-23	5

W=1285mm

D=320mm

H=122mm

Weight=19.4kg